




Product Introduction



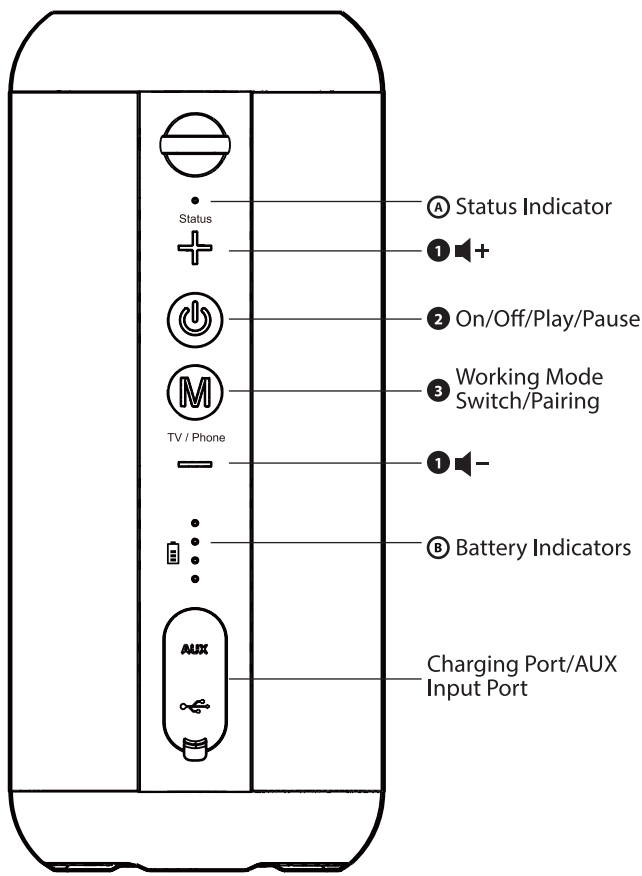

Product Overview



Button Functions

No.	Button	Function
1	+/-	Click or hold to adjust volume
2		Press and hold to turn the speaker on / off
		Click to play / pause music (Bluetooth mode)
3		Click to switch between TV mode and Bluetooth(Phone) mode, you will hear "TV mode / Bluetooth mode".
		Press and hold for 7 seconds to manually enter pairing mode, you will hear "pairing".


LED Indicators

No.	Indicator	Status
A	Flashing blue (once per 2 seconds)	Power on / disconnected
	Solid blue	Connected
	Flashing red & blue	Pairing mode
B		25% battery
		50% battery
		75% battery
		100% battery
	Battery indicator flashing	Charging



Adding More Speakers

You can add up to 100 Harmony speakers to your setup while maintaining low latency. Please note that ONLY Avantree Harmony speakers are compatible due to private protocol connections.

STEP 1

On your transmitter, press and hold the button  for 2 seconds, the LED indicator "Link" flashing white.

STEP 2

Turn on your Harmony-Extra speaker, you will hear "Welcome to Avantree, TV mode", if not, press once the button to  enter TV mode. Then press and hold the button  for 7 seconds until you hear "pairing" and the connection indicator flashing red & blue.

STEP 3

Keep them close and wait for 2 seconds. Once connected, the speaker's connection indicator turn solid blue and transmitter indicator "Link" turn solid white.

To purchase Avantree Harmony-Extra speakers, scan the QR code below.



Use the Speaker Independently with a Phone

STEP 1

On your speaker, click the button (M) to switch to Bluetooth mode, one will hear "Bluetooth mode".

For the 1st time, it will enter pairing mode automatically, and the connect indicator will flash red & blue. If not, press and hold the button (M) for 7 seconds to manually enter pairing mode.

STEP 2

Turn on your Phone's Bluetooth and select "Avantree Harmony" from the Bluetooth menu.

Charging the Speakers

Charge the speakers using the provided USB C charging cable and 5V/2A rated USB adapter.

A flashing battery indicator indicates that charging is in progress; once all 4 battery indicators turn solid white, your speakers will be at full battery. It takes about 3.5 hours for the speakers to fully charge.

Contact Us



Support Tickets avantree.com/submit-a-ticket



Support Email support@avantree.com



Support Numbers

US	+1 800 232 2078	9am-6pm PST	Mon-Fri
CA	+1 800 232 2078	9am-6pm PST	Mon-Fri
UK	+44 208 068 2023	9am-6pm GMT	Mon-Sat
DE	+49 322 2109 7297	11am-9pm CET	Mon-Sat
FR	+33 17 634 0312	11am-9pm CET	Mon-Sat
IT	+39 069 4803 330	9am-6pm CET	Mon-Sat
ES	+34 93 1786 261	9am-6pm CET	Mon-Sat
AU	+61 2 8310 9897	11am-7pm AEST	Mon-Fri



FAQ avantree.com/support/harmony



Video Guide avantree.com/harmony/video