

ProLink

User Manual




User Manual & FAQs




Table of Contents

Box Contents	3
Product Introduction (Transmitter)	4
Product Overview.....	4
Button Functions	5
LED Indicators.....	5
Product Introduction (Receiver)	6
Product Overview.....	6
Button Functions	7
LED Indicators.....	8
Set up	9
Power on and connect.....	9
Audio Setting on PC/PS5	11
Advanced Features	12
Using the AS70P Receiver with Your Phone.....	12
Using the AS70P Receiver with Both Phone & Transmitter.....	14
Charging	14
Specifications	15
FAQ	16
Contact Us	81


Box Contents

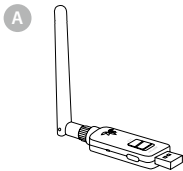


DG60L Transmitter

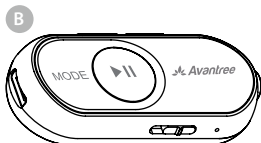

AS70P Receiver




USB C Charging Cable



AUX 3.5mm Audio Cable




AUX 3.5mm Female to
2.5mm Male Adapter
(For Headphones with
AUX 2.5mm Jack)





USB A Female to
USB C Male Adapter

Product Introduction (Transmitter)

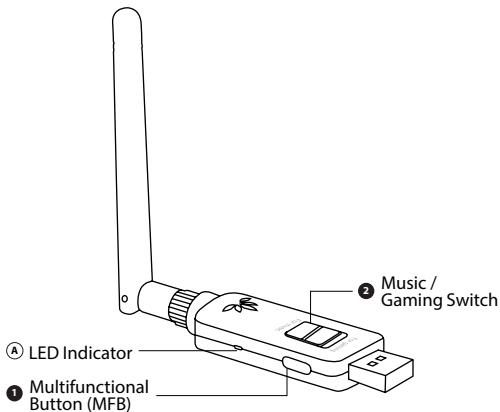Product Overview



Button Functions



No.	Button	Functions
1		Press & hold for 2 seconds to enter pairing mode
		Press once to reconnect the last paired device
		Double click to clear pairing history while in pairing mode
2		Slide switch to "For music" to enable high quality audio, or "For gaming" to enable low latency

LED Indicators




No.	Indicator	Status
A	Alternate red & blue flashes	Pairing
	Solid white	Connected with LC3 audio
	Solid blue	Connected with aptx lite audio
	Blue flashes once every 1 second	Reconnecting
	Solid blue & red simultaneously (pink) for 2 seconds	Clearing pairing history (Reset)

Product Introduction (Receiver)

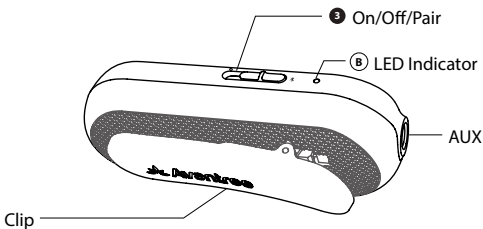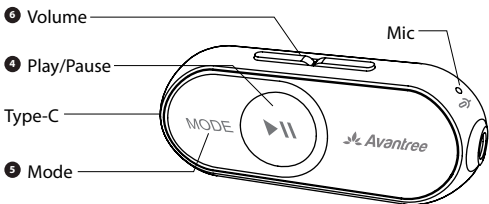Product Overview



Button Functions

No.	Button	Functions
3		Slide to ●/○ to turn on / off
		Slide to ✂ and hold for 2 seconds to enter pairing mode
		Slide to ✂ and release to reconnect the latest device
4		Press once to play / pause
		Press once to accept / end call
		Press & hold for 2 seconds to reject call
		Press twice to redial the last number
5	MODE	Switch between balance / bass mode
		Press once to unmute / mute microphone while talking
		Press once to activate voice assistant while not talking
		Press and hold it and V+/V- simultaneously to turn voice prompt ON / OFF
6		Press once for volume up / down
		Press and hold for 2 seconds for next / previous track
		Press and hold both for 5 seconds to clear pairing history (Reset)

NOTE: The Accept/end/reject call, redial last number and activate voice assistant functions only work while the AS70P is paired with mobile phones.

LED Indicators


No.	Indicator	Status
B	Alternate red & blue flashes	Pairing
	Solid blue	Connected via classic audio
	Solid white	Connected via LE audio
	Solid blue & red simultaneously (pink) for 2 seconds	Clearing pairing history
	Red flashes every 20 seconds	Low battery
	Solid red	Charging

Set up

Power on and connect

STEP 1

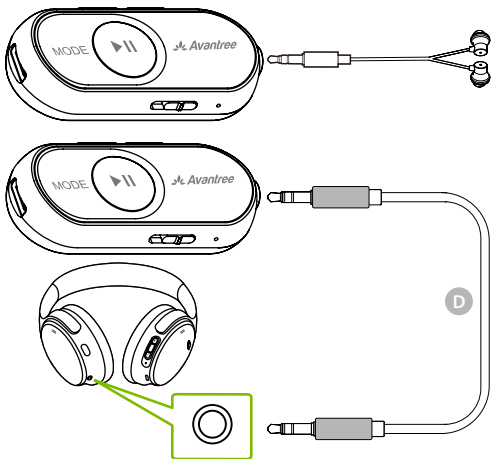

Connect your headphones with the AS70P receiver.



STEP 2


Plug the DG60L transmitter into the PC/PS5's USB port. It will turn on automatically once the PC/PS5 powers up.

STEP 3

Turn on the AS70P by sliding the  to ●. The AS70P and the DG60L should automatically connect to each other within 2-5 sec of turning them on. Once connected, the LED on the DG60L will be solid white or blue and the LED on the AS70P will be solid white. If they don't automatically connect, press the  on DG60L once to reconnect.

NOTE 1: The mic on your headphones will not work when connected with the AS70P. The built-in mic on the AS70P will work.

NOTE 2: To get better talking quality, the microphone should be pointed upward. We recommend to clip it on your shirt collar.


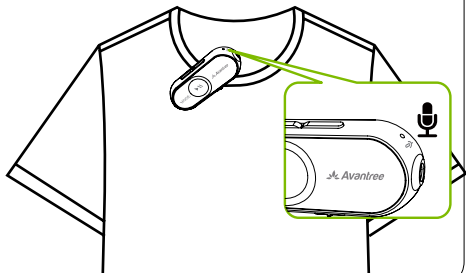


Audio Setting on PC/PS5

Configuring Audio Settings on PC

STEP 1

Choose "Avantree DG60L" as the default audio input / output device.

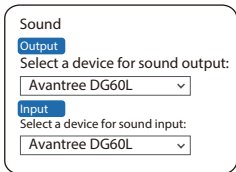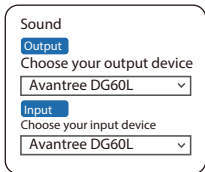

STEP 2


For VoIP Call – please repeat the Step 1 in your meeting software (i.e. Zoom, Skype, etc.)



NOTE: It doesn't support Teams talking.

Configuring Audio Settings on PS5

Go to Settings - Sound. Ensure that both "Input Device" and "Output Device" are set to "USB Headset (Avantree DG60L)". This will allow you to hear the game's background music and communicate with your partner at the same time.



NOTE: We recommend to switch the DG60L to "For gaming" mode to enjoy super low latency for gaming.





Advanced Features

Using the AS70P Receiver with Your Phone

STEP 1


Unplug the DG60L.

STEP 2

Turn on the AS70P by sliding the  to . Slide  to  and hold for 2 seconds until the LED flashes blue and red alternately. If you have headphones plugged in, you will hear "pairing".

STEP 3

On your phone - Activate Bluetooth, then search for & select "Avantree AS70P" to connect.

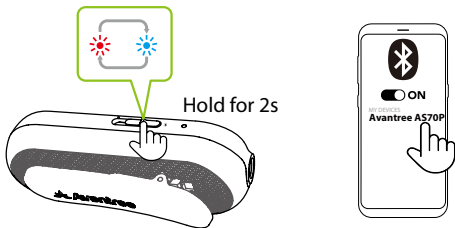**STEP 4**

Keep the AS70P & your device close together and wait for 5-10s until they connect. Once connected, the LED indicator will turn a solid color. If you have headphones plugged in, you'll hear "connected".

FOR SUBSEQUENT USE

The earphones should automatically reconnect to the last-paired device within a few seconds when turned on. If not, select "Avantree AS70P" in your device's Bluetooth menu to reconnect.

NOTE: The AS70P can be used independently with your own devices like phones/Bluetooth transmitters, but the DG60L transmitter can't be used with other Bluetooth headphones. It only works with LE Audio headphones/speakers.

Using the AS70P Receiver with Both Phone & Transmitter

STEP 1

Connect the AS70P to your phone per the instructions above.

STEP 2

Plug the DG60L transmitter into your PC/PS5'S USB port and wait for about 2 seconds; it will connect to the AS70P automatically. The AS70P will now be connected to your phone and transmitter simultaneously. You can:

Listen to Audio on your PC/PS5.

Respond to incoming calls on your phone - Press the ►|| on the AS70P to accept an incoming call, or press & hold for 2 seconds to reject.

Charging

Charging the Receiver(AS70P)

When the LED indicator flashes Red, you should charge the device. Using the provided type C cable, plug the AS70P into either a wall outlet - 5V/500mA-1A rated USB adapter (any phone charger should work) or a PC USB port. The LED indicator will turn solid red while charging and off when fully charged. It normally takes around 1 hour to fully charge.

Specifications

Transmitter (DG60L)

BT version	V5.3
Operating range	Up to 50 meters in open areas
Bluetooth profiles	MCP V1.0, CCP V1.0, VCP V1.0
Supported audio codecs	LC3, APTX-Lite
Rated input	DC5.0V / 500Ma-2A
Product dimensions	96 x 88 x 23mm
Net weight	22g

Receiver (AS70P)

BT version	V5.3
Operating range	Up to 20 meters in open areas
Bluetooth profiles	MCP V1.0, CCP V1.0, VCP V1.0, HSPV1.2, HFPV1.8, AVRCP V1.6.2, A2DP V1.3.2
Supported audio codecs	LC3; aptX-Lite; aptX Adaptive; aptX HD; aptX; SBC
Battery life	16hr
Rated input	DC5.0V / 500Ma-1A
Product dimensions	115*75*31mm
Net weight	10g

FAQ

Below are some of the most common questions people have during setup.

Can I use the DG60L with my own headphones?

The DG60L can only work with LE Audio headphones/speakers.

Why is the volume of my mic so low?

Please make sure the mic of the AS70P is pointed upward and close to your mouth.

I can't get the AS70P to reconnect with the DG60L

Please get both the DG60L and AS70P into pairing mode and manually pair them again.

.....

For answers to questions like these and for a full FAQ list, you can visit avantree.com/support/prolink, or you can contact us directly for additional assistance.

Contact Us



avantree.com/submit-a-ticket



support@avantree.com



US	+1 800 232 2078	9am-6pm PST	Mon-Fri
CA	+1 800 232 2078	9am-6pm PST	Mon-Fri
UK	+44 208 068 2023	9am-6pm GMT	Mon-Sat
DE	+49 322 2109 7297	11am-9pm CET	Mon-Sat
FR	+33 17 634 0312	11am-9pm CET	Mon-Sat
IT	+39 069 4803 330	9am-6pm CET	Mon-Sat
ES	+34 93 1786 261	9am-6pm CET	Mon-Sat
AU	+61 2 8310 9897	11am-7pm AEST	Mon-Fri



avantree.com/support/prolink



See QR code on the product.

Manufacturer:

Avantronics Limited Luohu District, Shenzhen 518000 China
+ 86 755 8228 5022 | support@avantronics.com

US Importer:

Avantree Corporation San Jose, California 95119 USA
+1 800 232 2078 | support@avantree.com

UK Importer:

Avantree Limited Watford, WD180 0HQ UK
+44 20 8068 2023 | support-uk@avantree.com

**EU Importer and Responsible Person:**

Avantree Europe Z O.O.Ul.  łNierzy I Dywizji Wojska
Polskiego 78a/2 84-230 Rumia, Pomorskie, Poland
+48 22 307 25 37 | support-eu@avantree.com

Battery Manufacturer and Responsible Person:

Dongguan LiDu Electronic Technology Co., LTD
21Nanshe Road, Humen Town, Dongguan, Guangdong
+86 769 8825 2358 | xky@lidudz.com



Item No: BTHT-670

Model No.: BTDG-60 ; BTHS-AS70-P

FCC ID: 2A1TF-BTDG-60 ; 2A1TF-BTHS-AS70

IC: 8475A-DG60 ; 8475A-AS70P

Made in China

Z-PKQG-670-VI